

Maintenance and installation

Maintaining the lamps is very simple: vacuuming. Use the furniture nozzle and set the suction power to low - or open the slider on the vacuum cleaner hose. For the shades made with corduroy move de nozzle from the bottom to the top only. Avoid strong discoloration, do not place the lamps in direct sunlight. Colors can lighten over time.

The base of the lamp is stuffed with buckwheat hulls - do not open!

Use an LED lamp only, then the lamp is absolutely safe!

Lampshades have an overlap, a seam. Turn this seam to the back, out of sight. By slightly loosening the top screw ring on the tapped fitting neck, the hood can rotate. It is easier if the LED lamp is first removed from the socket. Tighten the screw ring again after adjusting the hood.

Is the lamp on the right place? Finally, the shade can be neatly straightened. A hidden mechanism incorporated in the lamp base makes this possible. Place one hand on the top edge of the hood and two fingers of the other hand on the bottom edge. Now carefully move the hood into the correct position. The mechanism allows the lampshade to tilt in all directions.

The correct LED lamp is already included. Plug the plug into the socket and turn on the cord switch.

Have fun with the lamp!